

SW4	SW3	SW2	SW1	EPROM ADDR	JUMP ADDR	START MODE SELECTION
ON	ON	ON	ON	ØXX	EØØØ	CK8085 MONITOR VERSION 2
ON	ON	ON	OFF	1XX		
ON	ON	OFF	ON	2XX		
ON	ON	OFF	OFF	3XX		
ON	OFF	ON	ON	4XX		
ON	OFF	ON	OFF	5XX		
ON	OFF	OFF	ON	6XX		
ON	OFF	OFF	OFF	7XX		
OFF	ON	ON	ON	8XX		
OFF	ON	ON	OFF	9XX		
OFF	ON	OFF	ON	AXX		
OFF	ON	OFF	OFF	BXX		
OFF	OFF	ON	ON	CXX		
OFF	OFF	ON	OFF	DXX		
OFF	OFF	OFF	ON	EXX		
OFF	OFF	OFF	OFF	FXX		

MICROCOMPUTER START EPROM ADDRØ CHRISTIAN KOHLI

